


Step 1) Quit all currently running programs


Step 2) Click on the link below:

http://web.keyline.it/prodotti/chiavi/download/884_vLast.zip


Step 3) Your computer should ask if you want to 'Open' or 'Save' the file. Click '**Save**' and save the file to your **Desktop**.

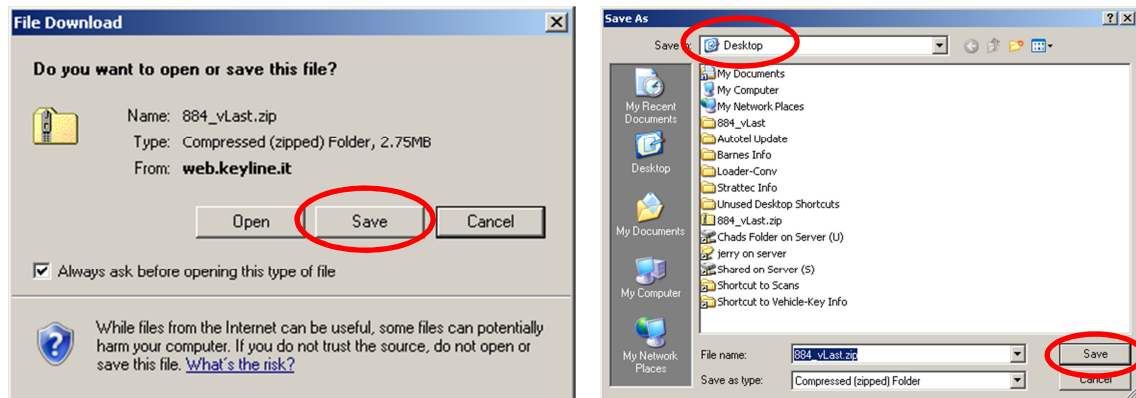




Step 4) Once the download is complete, click '**Open**'

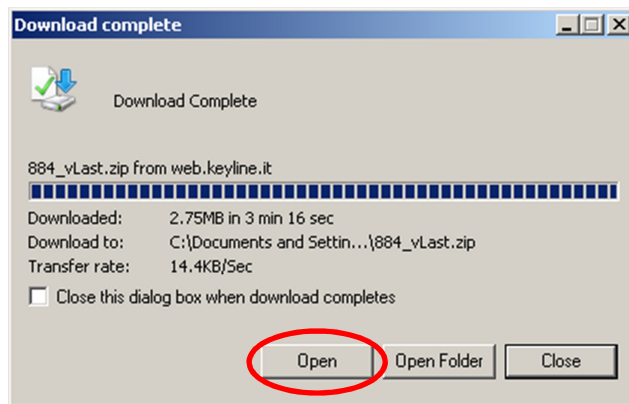


Step 5) Once the new screen opens, click '**Extract all files**' in the upper left corner.

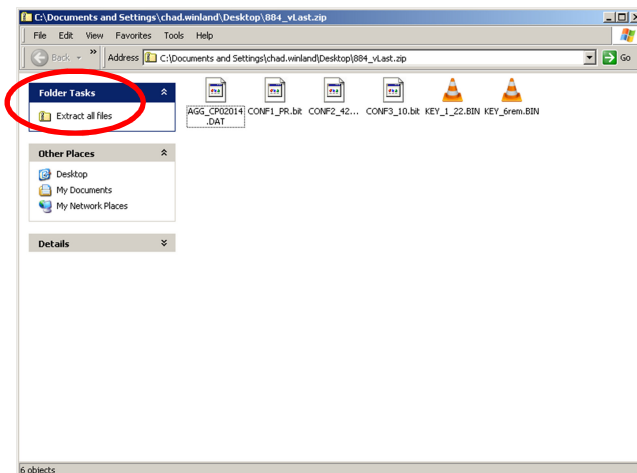

Step 6) Follow the Folder Extraction Wizard by clicking '**Next**', '**Next**' and '**Finish**'

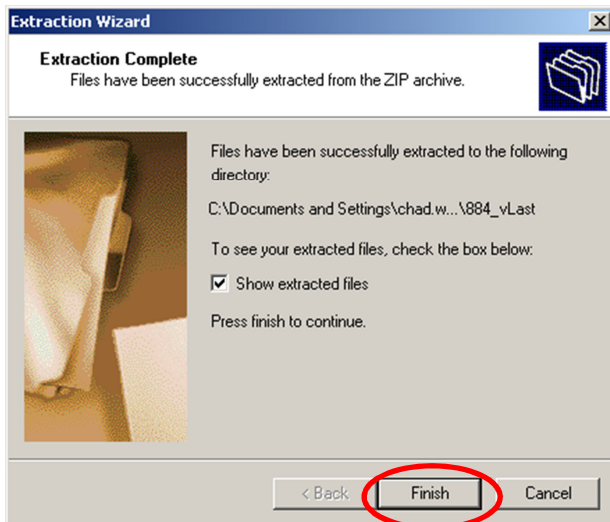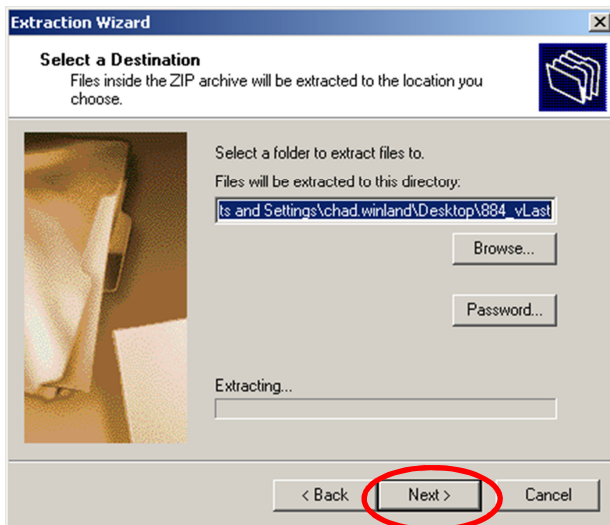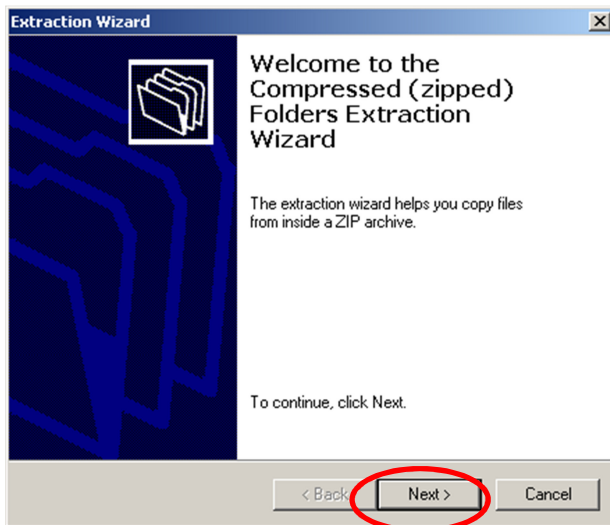

Once this is complete, a new folder will open with the individual files.

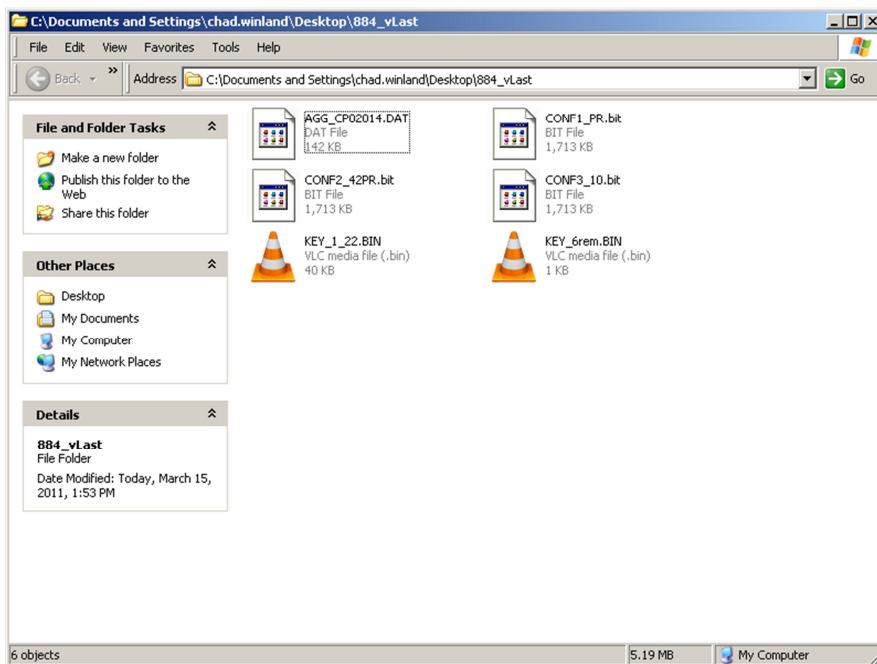


Step 7) Connect the 884 Ultegra to the computer via the supplied USB cable.


Step 8) Turn **ON** the 884 Ultegra. A new screen will open (like a flash drive).

Note: If the new window does not open, you will need to find the device and manually open the screen by going to **My Computer** and double clicking '**Disk884**'.

If the 'Found New Hardware Wizard' appears, click '**Cancel**'.

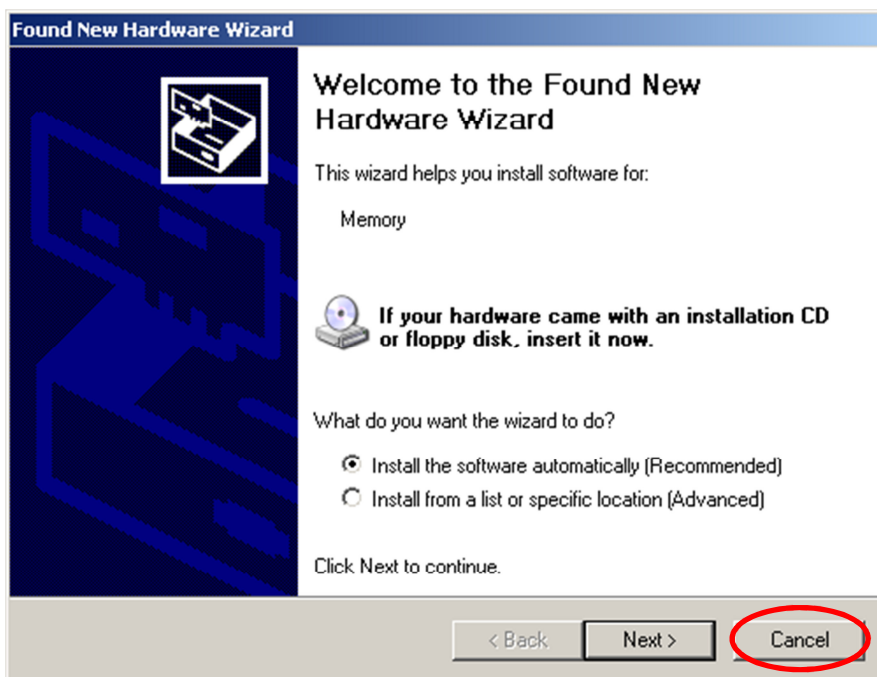

A new file, ULTEGRA.ID, will then appear on the screen;

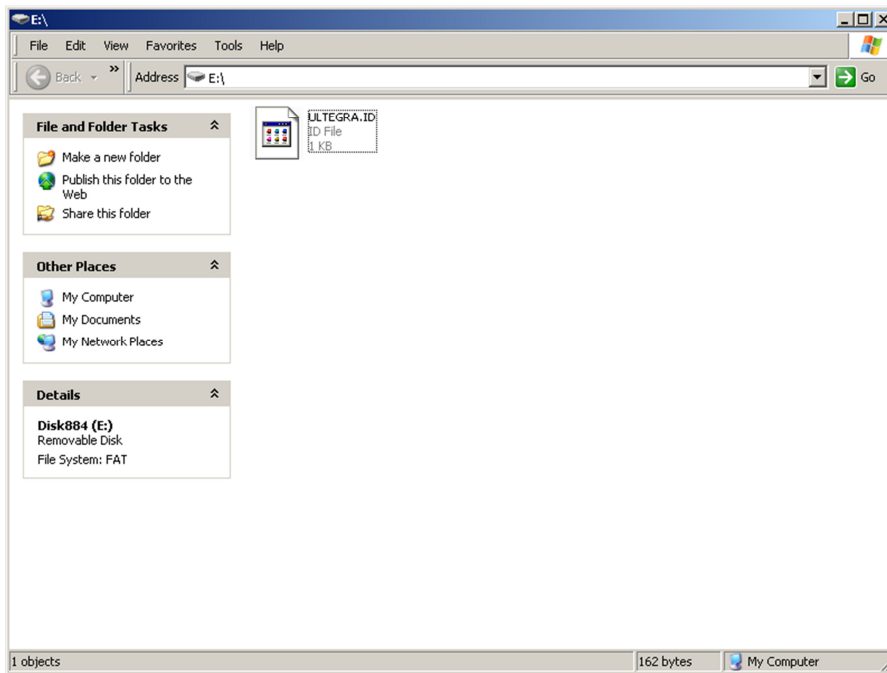

Step 9) Once this screen opens, individually copy or drag-n-drop each file **ONE-AT-A-TIME** from the download file into this drive. Note: After each file is installed into the 884, the 'ULTEGRA.ID' file will close and re-open. (Click '**Cancel**' each time the 'Hardware Wizard' screen opens)

Continue to copy or drag-and-drop each file into the 'ULTEGRA.ID' file. Once the last file has been installed and the 'ULTEGRA.ID' file re-opens, close out all the open files and turn off the 884.

Step 10) Disconnect the USB cable and turn the 884 Ultegra back **ON**. Verify the new software has been installed by checking that the Release number has been updated (ex: Rel. 02.014).